

THE **FUTURE**  
**NOW SHOWING**

NOW SHOWING  
THE FUTURE



datastream

Welcome

# THE NEW WAY TO WATCH



Digital TV is different than anything you have seen before. It isn't cable...it's better. Digital TV offers great channels, many features and many choices. Watch what you want – sports, movies, news, cartoons, drama, comedies – anything you can imagine is there. Watch when you want – with features like Autotune and digital video recording. Watch how you want – high quality digital video and sound. So sit back, relax and enjoy the future.

Digital TV User's Guide Copyright © 2005-2010 MS Communications. IPG screen images Copyright © 2010 Minerva Networks, Inc. Used with permission. All rights reserved. Portions Copyright Advanced Digital Broadcasting (ADB), Amino Communications, Ltd., Entone, Inc and Universal Electronics, Inc.. Used with permission. All rights reserved. All other images copyright and/or trademark of their respective owner(s). Dolby and the double-D symbol are registered trademarks of Dolby Laboratories.

This material may not be duplicated, in whole or in part, by any means, without the express written consent of MS Communications, Ringgold GA 30736 USA.

# Table of Contents

<b>Remote Control Layout</b>	<b>1</b>
Entone 06-04 Remote Control	1
<b>1 Remote Control Basics</b>	<b>3</b>
Turn Your Set Top Box or TV On or Off	3
Change Channels	3
Adjust Volume	3
System Buttons	3
<b>2 How To Use This Book</b>	<b>5</b>
Layout	5
Color-codes & Icons	5
<b>3 Infobar</b>	<b>6</b>
Infobar Layout	6
Introducing The Infobar	7
Go To The Infobar	7
Using the Infobar	8
Exiting the Infobar	9
<b>4 Menubar</b>	<b>10</b>
Introducing the Menubar	10
Go To the Menubar	10
Understanding the Menubar	10
<b>5 Guide</b>	<b>12</b>
Guide Layout	12
Introducing Guide	13
Go To Guide	13
Parts of Guide	13
Getting Around Guide	13
HDTV Programming	13
Accessing a Favorites List in Guide	13
<b>6 Guide &amp; Recording</b>	<b>14</b>
Introducing Guide & Recording	14
Introducing Scheduled Events	14
Setting a Reminder, Autotune or Recording	14
Setting a Series Recording	16
Editing a Recording	17
Editing a Series Recording	18
Skipping an Episode	19
Canceling an Autotune, Reminder, Recording or Series Recording	20

# Table of Contents

<b>7 Pay Per View</b>	<b>22</b>
Introducing Pay Per View (PPV)	22
Go To Pay Per View	22
Buying Pay Per View	22
<b>8 DVR</b>	<b>24</b>
Introducing DVR	24
Quick Recording	24
General Guidelines About Recordings	24
Pausing Live TV (PLT)	24
Controlling Recorded or Live TV	25
DVR Playback Controller	25
The DVR Menu	26
Go To DVR	26
The DVR Menu Quick Reference	26
Go To Recordings	26
Whole-Home Icon	27
Sorting Recordings	27
Watching a Recorded Program	27
Locking or Unlocking a Recording	28
Deleting a Recording	28
Stopping a Program Currently Recording	29
Reviewing Programs To Record	29
Go To- To Record	29
Canceling a Future Scheduled Recording	29
Schedule Priority	30
Go To Schedule Priority	30
Changing Schedule Priority	30
Schedule an Event	30
Go To Schedule Event	30
Editing a Scheduled Event	31
Your Recording History	31
Go To Record History	31
Reviewing Record History	31
<b>9 My Library</b>	<b>32</b>
Introducing My Library	32
The My Library Menu	32
Go To My Library	32
Go To Rented Videos	32
Watching a Rental Video	33

# Table of Contents

Introducing PPV Events	33
Go To PPV Events	34
Introducing Pay Per Block	34
Go To Pay Per Block	34
Introducing Sports Package	34
Go To Sports Package	35
Introducing Reminders	35
Go To Reminders	35
Cancel a Reminder or Autotune	35
Introducing Messages	36
Go To Messages	36
Reading a Message	37
Introducing Caller ID	37
Go To Caller ID	37
Deleting a Caller ID Entry	38
<b>10 Controls</b>	<b>39</b>
Introducing Controls	39
Go To Controls	39
Turning Controls On or Off	39
Turning Controls Off	40
Turning Controls On	40
<b>11 Settings</b>	<b>41</b>
Introducing Settings	41
Go To Settings	41
Working With Preferences	41
Working With Settings/Users	44
Go To Parental Controls	44
Parental Controls	44
Adding a User Account	46
Sign Out / Sign In	48
Log In	48
Go To Sign Out / Sign In	48
Editing a User Account	49
<b>12 Favorites</b>	<b>51</b>
Introducing Favorites	51
Go To Favorites	51
Choosing a Favorites List	51
Creating or Editing a Favorites List	52
Delete a Favorites List	52

# Table of Contents

Adding/Removing a Channel To Favorites While Watching TV	53
Adding/Removing a Channel To Favorites from Other Screens	53
<b>13 Search</b>	<b>54</b>
Introducing Search	54
Go To Search	54
Search For A Program	54
<b>Set Top Box</b>	<b>56</b>
Entone Amulet Set Top Box	56
Entone Janus Set Top Box	57
<b>Movie Ratings</b>	<b>58</b>
MPAA (Motion Picture Association of America) Ratings System	58
<b>TV Ratings</b>	<b>59</b>
TV Parental Guidelines Ratings System	59
Program Ratings	59
Content Ratings	59

# Remote Control Layout

## Entone 06-04 Remote Control

### Device Selection

Press to control your TV, STB, or Auxiliary Device

### Playback Controls

Control playback of DVD or DVR

### DVR & LIVE TV

Press DVR to use the DVR functions, and press LIVE TV to return to live TV from viewing a recording

### Aspect Ratio Settings

Change TV's aspect ratio or switch from SD to HD

### OK

Enter a choice you have selected

### BACK

Return to the previous selection

### VOL + / -

Adjust volume

### MUTE

Toggle audio on/off

### Number Pad

Enter a channel number or PIN

### INPUT

Choose between TV connections

### POWER

Turn a selected device on or off

### Record

Begin recording

### VIDEO

Future Use

### MENU

Display main menu

### INFO

Display information about the current program

### Arrow Keys

Move the highlight in menu screens

### EXIT

Exit current menu

### GUIDE

Display the guide

### CH/PG Up/Down

Change the channel or move guide up or down an entire page

### LAST

Return to the previous channel

### CC

Toggles Closed Captioning on/off



**This Page Intentionally Left Blank**

# 1 Remote Control Basics

## Turn Your Set Top Box or TV On or Off

---

The device selection buttons tell your remote whether you want to control your set top box or your television.

To turn your TV On/Off, press the **TV** button then the **POWER** button.

To turn your set top box on or off, press the **STB** button and then the **POWER** button.

*Note: It is not necessary to turn your set top box off.*

*Note: Your remote control must have the remote code programmed in before it can send the correct signals for your TV. If the list of TV brand codes was not included in your installation pack, please contact customer service.*

If pressing **POWER** turned the wrong device on or off, press the **POWER** button again, press the appropriate device selection button (**TV**, **AUD**, **DVD**, **AUX** or **STB**) and press **POWER** once more.

## Change Channels

---

The **CH+/-** button will change channels up or down one at a time.

The **Number Pad** can be used to directly enter a channel number.

**GUIDE** will display Guide so you can find a program you like. If the program is on now, you tune to the channel showing it. If not, you can set a scheduled event to remind you when it does come on. If your set top box supports recording, you can schedule a recording for the program.

For more information on Guide, see section **5 Guide**.

For more information on setting Reminders, Autotunes and Recordings, see **Setting Reminders, Autotunes and Recordings** in section **6 Guide & Recording**.

## Adjust Volume

---

The **VOL+/-** button will adjust the volume gradually.

The **MUTE** button will toggle the sound on and off.

## System Buttons

---

There are a number of buttons on your remote that display different features of your service.

# 1 Remote Control Basics

**MENU** displays the Menubar when in cable [STB] mode, and in [TV] mode you will see your TV's menu. The Menubar provides quick access to every feature supported by your service.

For more information about the Menubar, see section **4 Menubar**.

**INFO** displays the Infobar, a feature that lets you see information on what you're watching, what's coming on next, and what's on other channels.

For more information on the Infobar, see section **3 Infobar**.

**EXIT** causes your set top box to exit whatever screen you are seeing and return you to normal TV viewing. If you ever get lost on a screen, it is always safe to press **EXIT** and then start over.

## 2 How To Use This Book

### Layout

---

Instructions are paired with screen shots to illustrate the process and provide confirmation of what you should see on your TV.

Section headings and on-screen text, such as screen titles, messages and options are shown in **Deep Blue Bold Type**.
















Buttons on the remote control are represented by a graphic of that button, or **Red Bold Type** when a graphic cannot be shown.

### Color-codes & Icons

---

Program listings may display icons based on settings for a particular program.

#### Program Attributes



- |   |  |
|---|--|
|  New Episode (not a re-run)     |  Program in High Definition |
|  Autotune                       |  Reminder                   |
|  Record*                        |  Series-Record*             |
|  Series Record Episode Skipped* |  |
|  Closed Captioned               |  Dolby Digital Audio        |
|  Favorite List In Use           |  Lock Program               |
|  Live TV                        |  |
|  Blocked by Parental Controls  |  |
|  Recording to DVR             |  Whole-Home DVR           |

*\*Record and Series Record only appear if your set top box supports recording.*

All menubar icons and explanations are in **4 Menubar**.

# 3 Infobar

## Infobar Layout

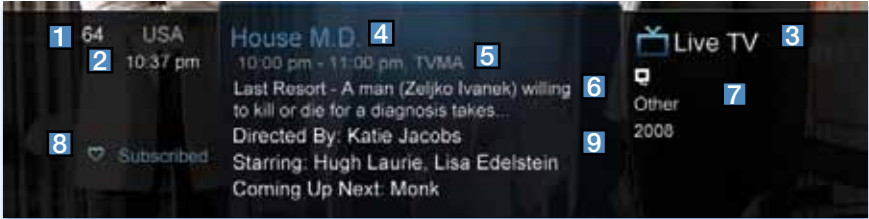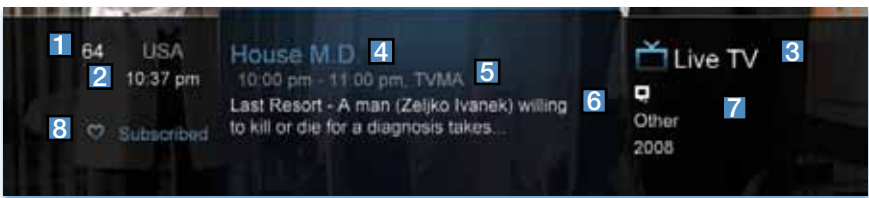

### 1 Channel Name & Number

The name and number of the channel currently listed in the Infobar.

### 2 Current Time

### 3 Program Type

Indicates whether you are watching Live TV, a recorded program or a Pay-Per-View program. This may also indicate if the program is Blocked because of parental controls or that the Emergency Alert System is active.

### 4 Program Name

### 5 Program Start Time, End Time & Rating

### 6 Program Summary

### 7 Additional Program Information

Indicates the type of program (movie, sports, etc.), Closed Captioning, Dolby Digital audio, and year of original release.

### 8 Current Favorites List

### 9 Director, Stars & Coming Up

The detailed Infobar will list the director and stars of a program, along with the name of the next program on this channel.

## 3 Infobar



### Introducing The Infobar

The Infobar is a quick way of finding information about the show you are watching, as well as what comes on later and what is on other channels.

### Go To The Infobar


There are three ways to make the basic Infobar appear.

Press **INFO** on your remote control.

Press the **Up** or **Down Arrow Keys** on your remote control.

The basic Infobar will also appear any time you change channels.

Once the Infobar is active, press **INFO** again to display the detailed Infobar. It adds information on directors, actors and the name of the next program.

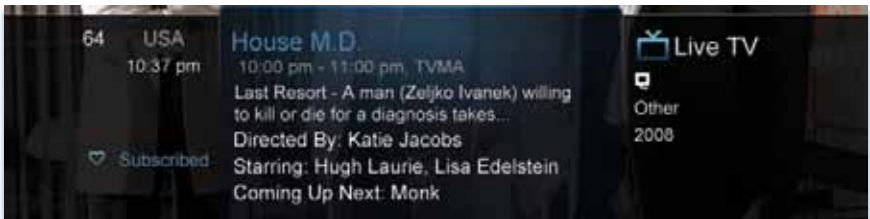

# 3 Infobar

## Using the Infobar

### Step 1: Go To The Infobar

Press **INFO**, the **Up or Down Arrow Keys**, or change channels.



### Step 2a: See What's On Other Channels

Press the **Up or Down Arrow Keys** to scroll the Infobar through what is showing on other channels without actually changing channels.

If you find something you would rather watch on another channel, press **OK** to tune to that channel.



### Step 2b: See What's On Later

Press the **Right Arrow Key** to scroll ahead to upcoming programs for the channel listed on the Infobar.

Press the **Left Arrow Key** to scroll back towards the current program for the channel listed on the Infobar.

## 3 InfoBar

You can combine steps 2a and 2b to see what comes on later on another channel if you like. However, if you plan to do a lot of browsing for programs on other channels or that are coming on later, it is easier to use Guide. For more information on Guide, see section [5 Guide](#).



Press **OK** to display options to set a Reminder, Autotune or Recording (if your set top box supports DVR).

For more information on setting Autotunes, Reminders, and Recordings, see [Setting Reminders, Autotunes & Recordings](#) in section [6 Guide & Recording](#).

**Note:** *Recording options will not be available if your set top box doesn't support those features.*

### Exiting the InfoBar

The InfoBar will go away on its own after a few seconds of inactivity, or...

Press **EXIT** on your remote control.

If you are in the detailed InfoBar, you can press **INFO** once more to exit the InfoBar.

## 4 Menubar



*Note: Parental Controls must first be set up in Settings before the Parental Controls on/off button will appear on the Menubar.*

### Introducing the Menubar

The Menubar is a quick and easy way to access any feature of your service.

### Go To the Menubar

To display the Menubar, press **MENU** on your remote control.

### Understanding the Menubar




**Guide** will bring up the program guide. For information on Guide, please see section **5 Guide**. To record or edit a recording, please see section **6 Guide & Record**.



**PPV** jumps directly to the Pay Per View channels in the program guide. For information on PPV, please see section **7 Pay Per View**.





**DVR** provides access to programs recorded using DVR, as well as reviewing recordings you have scheduled, creating a scheduled recording event, reviewing the history of what you have recorded recently, or deleting your recording history. For information on DVR, see section **8 DVR**.

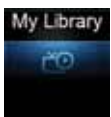


**My Library** provides quick access to previously purchased programs, Reminders you have scheduled, messages regarding your service, and Caller ID history. For more information on My Library, see section **9 My Library**.

## 4 Menubar

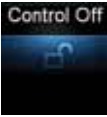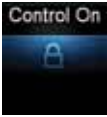

**Controls** allow you to temporarily disable or enable all parental controls. For information on parental control functions, see section **10 Controls**.


*Note: Control On/Off will not appear until you have created parental control settings.*

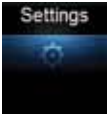


**Settings** offers access to creating parental controls and setting blocked channels, determining how things appear on the screen, and creating, editing and deleting user accounts. For information on Settings, see section **11 Settings**.



**Sign Out** allows you to sign out of the current user account. This only appears if you are using the Enable Login option under Settings/Preferences, have multiple user accounts, and have signed in with a user name and password. For information on user accounts, see **User Settings** in section **11 Settings**.

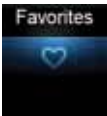

**Favorites** allows you to choose, edit, create or delete a favorite channel list. For information on Favorites, see section **12 Favorites**.

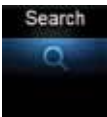

**Search** allows you to search program listings by title. For information on Search, see section **13 Search**.



# 5 Guide

## Guide Layout

### Favorites List

 
Indicates the favorite list currently in use.

### Info Area

Provides information about the currently highlighted program.

### Picture-in-Picture

Allows you to watch TV while you are in Guide.

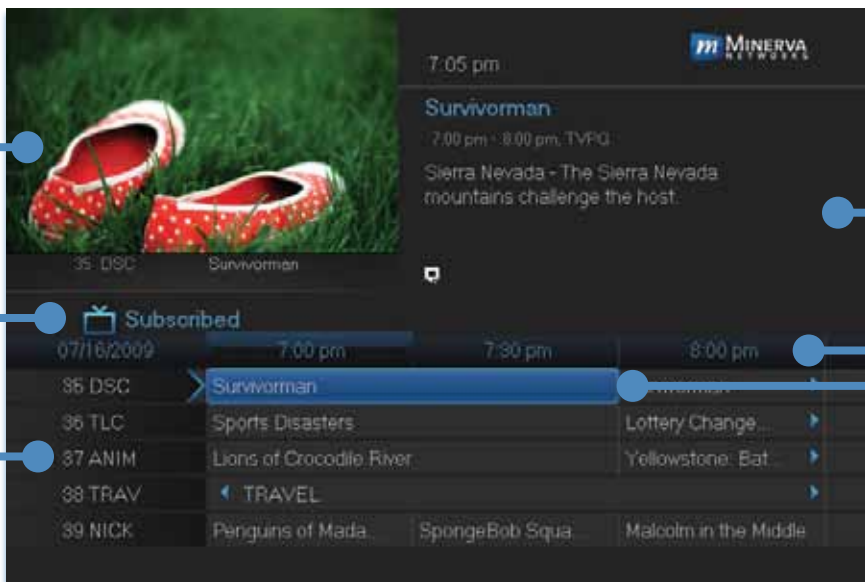

### Highlight

Indicates what program listing is currently in focus.

### Program Listings

Shows channel number and abbreviation and program listings for each channel. Program listings may include icons to indicate a setting or feature for a particular program.

### Listing Date/Time

Shows the date and time (divided into 30-minute increments) for the programs currently shown in Guide.



---

## Introducing Guide

---

Guide is the place to quickly find out what's on now and what's playing later. You can set Reminders or Recordings for upcoming programs in Guide.

---

## Go To Guide

---

There are two ways to go to Guide.

Press **GUIDE** or Press **MENU**, highlight **Guide**, and press **OK**.

---

## Parts of Guide

---

A diagram of the Guide screen is shown on **Guide Layout**.

---

## Getting Around Guide

---

To navigate Guide...

Press the **Arrow Keys** to move the highlight.

Jump to a channel by entering the channel with the **Number Pad (0-9)**.

Press **CH ▲** or **CH ▼** to move through the guide listings.


Press **OK** to choose the program you have highlighted. If it is on now, Guide will tune you to the channel.

Press **EXIT** to leave the Guide.

---

## HDTV Programming

---

Programs available in HD will appear in Guide with a blue **HD** icon  next to the name of the program. In order to watch HD programming, you will need a HDTV-capable set top box and TV, and may need to subscribe to an HD channel package.

---

## Accessing a Favorites List in Guide

---

A Favorites list allows you to select channels you watch most often, placing them on a list that is quickly accessed. For more details about creating, editing, or naming a Favorites list, see section **12 Favorites**.



The name of the active Favorites list is shown below the picture-in-picture area, as seen on the Guide Layout page. This causes Guide to **only display the channels included on that Favorites list**.

While in Guide, you can cycle through your Favorites lists by pressing **GUIDE** repeatedly. Each press will activate the next Favorites list. Cycling to **All** will display all available programming.



# 6 Guide & Recording

## Introducing Guide & Recording

A DVR is a great tool for digitally recording your favorite programs without the need for tapes or discs. In this section, you will learn about setting or scheduling a recording, recording a series, and editing a series recording.

 
## Introducing Scheduled Events

A Scheduled Event is any setting you create that causes the system to remind you about a program or record a program automatically. There are three types of Scheduled Events: Reminders, Autotunes and Recordings.

A Reminder informs you a program is about to come on. An Autotune automatically changes the channel when the program is about to start. A Recording will automatically record the program to your set top box.

**Note:** *Your set top box must support recording to use the Record event.*


## Setting a Reminder, Autotune or Recording

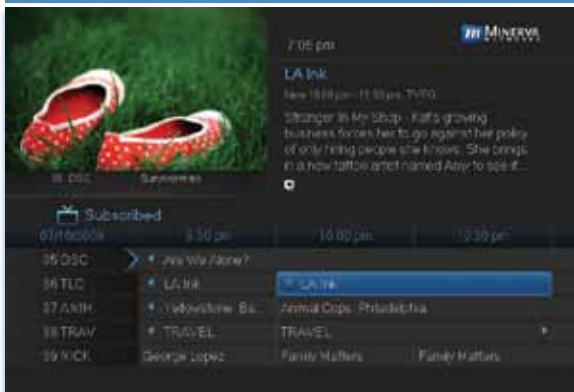

### Step 1: Pick a Program

Find the program you want. Highlight its listing and press **OK**.

 **Note:** If you are setting a recording, highlight the listing and press **RECORD** instead of **OK**, then skip steps 2 and 3.

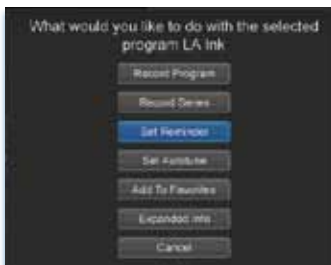


### Step 2: Set the Reminder, Autotune or Record

Highlight



or

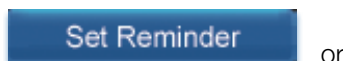

or



and press **OK**.


You will then be returned to Guide.



## Step 3: Return to Guide


The program listing now shows an icon next to the program's name.

- Reminder set
- Autotune set
- Recording set

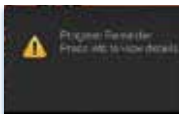

## Step 4a: Your Reminder

 A few minutes before your program comes on, a box will appear on your screen telling you that you have a Reminder.

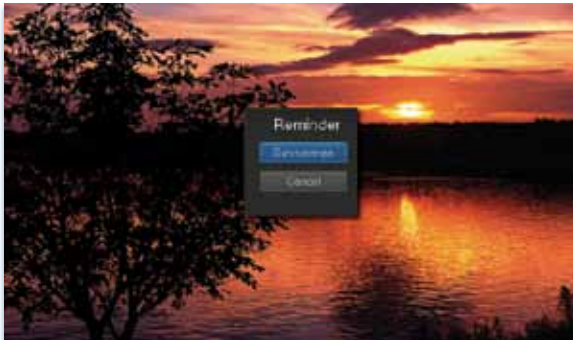

Press **INFO** to display the Reminder.

Highlight the button showing the program name and press **OK** to watch the program, or highlight **Cancel** and press **OK** to ignore the Reminder.



## Step 4b: Your Autotune

Just before the program begins, a message will display, giving you the option to tune in or cancel.



# 6 Guide & Recording

## Step 4c: Your Recording

If you set a recording, you don't need to do anything else.

Once your program begins, your set top box will record it for you. To watch your recording, go to DVR.

## Setting a Series Recording

**Note: Recording is not available if your set top box doesn't support it.**

If you choose to record a program that is part of a regular series, you will be offered the option to record the series. This allows you to record every episode of a favorite program.




### Step 1: Pick a Program

Find any episode of the series you want to record. Highlight the program listing and press **OK**.



### Step 2: Set the Recording

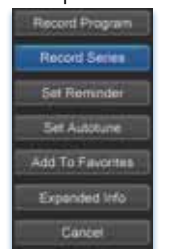


### Step 3: Return To Guide

Once you have set the series recording you will be returned to Guide.

The program listing now shows an icon next to the program's name.

Series Recording set

Every upcoming episode of the series will be recorded.

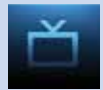

## Editing a Recording

**Note:** Recording is not available if your set top box doesn't support it.

Once you have created a recording, you can adjust exactly when the recording begins or ends to make sure nothing is missed in case the broadcaster's time doesn't match up with yours exactly.



### Step 1: Pick an Upcoming Recording

Locate the program to be recorded. Highlight its listing and press **OK**.

### Step 2: Edit Recording

From the options shown for this program, highlight **Edit Recording**

 
**Edit Recording**

and press **OK**.



### Step 3: Pad Start & End Times

Use the **Up and Down Arrow Keys** to choose **Start** or **End** and press **OK**. Once you see arrowheads above and below the **Start** or **End** box, use the **Up and Down Arrow Keys** to adjust the **Start** time or **End** time.

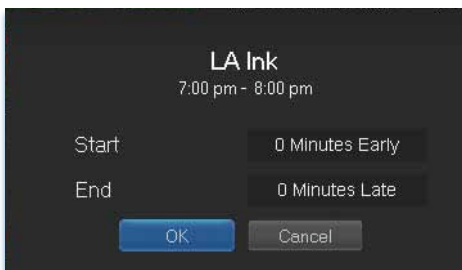



# 6 Guide & Recording

**Start** adjusts the amount of recording time added to the recording prior to when it's scheduled to begin so that you don't miss any of the beginning of the program.

**End** adjusts the amount of recording time added to the recording after it is scheduled to end so you don't miss any of the end of the program.

Once you have adjusted the start and end time, highlight **OK** and press **OK** to save your changes.

## Editing a Series Recording

**Note: Recording is not available if your set top box doesn't support it.**

Once you have created a series recording, you can adjust which episodes of the series are recorded and which are skipped.



### Step 1: Pick a Series Recording

Locate any program in the series to be recorded. Highlight its listing and press **OK**.



### Step 2: Edit Series Recording

From the options shown for this program, highlight **Edit Series Recording**



and press **OK**.



## Step 3: Adjust Series Recording Options

Use the **Up and Down Arrow Keys** to choose any of the options and press **OK**. Once you see arrowheads above and below the options setting box, use the **Up and Down Arrow Keys** to adjust that setting.

**Channels** determines whether the series is recorded when aired on the channel originally set to record, or record the series no matter what channel airs it.

**Preference** determines whether to record the program when shown in standard definition or only when shown in high definition.

**Episodes** determines whether to record re-runs and new episodes of the series or only new episodes.

**Start** and **End** determines how much time to add at the start and end time of the recording so that none of the program is missed.

**Limit To** determines how many episodes of the series are saved. If set to anything other than all, the system will delete the oldest recorded episode of the series once the limit is reached.

Once you have adjusted the series settings, highlight **OK** and press **OK** to save your changes.

## Skipping an Episode

Once you have created a series recording, you can manually skip any episode.



## Step 1: Pick the Episode

Locate the episode in the series you want to skip. Highlight its listing and press **OK**.



# 6 Guide & Recording

## Step 2: Skip the Episode

### Highlight Skip Episode

**Skip Episode** and press **OK**. You will be returned to Guide and the red dots on the episode listing will turn grey **+** to indicate you are skipping that episode. If you decide to record this episode after all, repeat this procedure and choose **Record Episode** from the options shown and press **OK**. The dots will become red again.

## Canceling an Autotune, Reminder, Recording or Series Recording

You can cancel any event you have previously scheduled directly from Guide.



### Step 1: Pick the Program

Highlight the program with the event you want to cancel and press **OK**.



### Step 2: Cancel the Event

Depending on the type of event you are cancelling, your option will be

**Cancel Reminder**

**Cancel Autotune**

**Cancel Recording**

or

**Cancel Series**



Highlight the option you want and press **OK**.

### **Step 3: Return to Guide**

After you press **OK**, you will return to the Guide.

The program listing will no longer display the event icon.

For more information on cancelling scheduled events, see section **9 My Library**.



# 7 Pay Per View

## Introducing Pay Per View (PPV)

Pay Per View allows you to watch exclusive sporting events and other content in the privacy of your home with no long lines, big crowds, expensive concessions and seats in the “nose bleed” section.

## Go To Pay Per View

Using the **Arrow Keys** on your remote, scroll the menubar to **PPV**, then press **OK**. The PPV list will appear on the Guide menu.

## Buying Pay Per View



*Note: Use these steps to purchase Pay Per Events, Pay Per Block, and Sports Packages.*

### Step 1: Pick the Program

Highlight the Pay Per View program you want to buy and press **OK**.



 
### Step 2: Buy PPV

Highlight  and press **OK**.



## Step 3: Confirm Your Purchase

Highlight the box next to **Enter PIN** and enter your Pay Per View PIN using the **Number Pad (0-9)**. For more information on PINs, see section **11 Settings**.

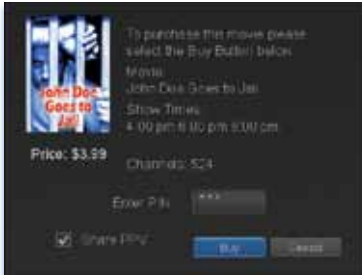

If you want to allow any other user accounts to be able to watch this Pay Per View, highlight the checkbox next to **Share PPV** and press **OK**.

For more information on user accounts, see section **11 Settings**.

Finally, highlight the **Buy** button and press **OK**.

## Step 4: Watch Your Pay Per View



At this point you can watch your pay per view just as you would any other program if it is currently playing.

If you purchased your pay per view program in advance, you can schedule an Autotune or Reminder event so that you don't miss it.

For more information

on setting Reminders and Autotunes, see **Setting a Reminder, Autotune or Recording** earlier in **6 Guide & Recordings**.




# 8 DVR

## Introducing DVR

 
A DVR is a great tool for pausing live TV (PLT) and digitally recording programs without the need for tapes or discs. However, most record features are accessed through your on-screen guide. Refer back to section **6 Guide & Recording** to learn more about setting or scheduling a recording, recording a series, and editing a series. Under the DVR icon, you can view and organize recordings as well as do a quick record, PLT, and a Scheduled Event recording.

## Quick Recording


The fastest and easiest way to begin recording is to use the **RECORD**  button on your remote control.

### Step 1: Start Recording

While watching a program, press **RECORD** . Recording will begin immediately.

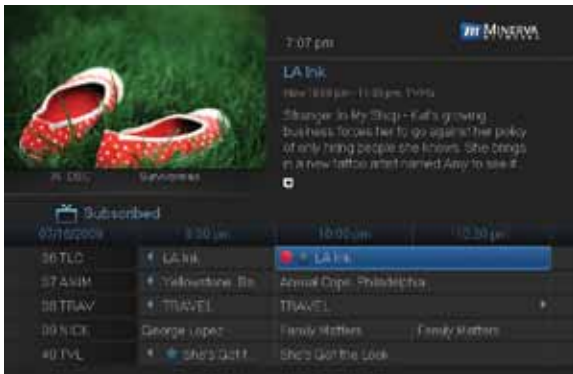

You can also start a quick record in Guide.

Highlight a program you want to record using the **Arrow Keys** and press **RECORD** .

If the program is currently on, recording will begin immediately. If the program comes on in the future, your system will record

the program for you automatically. Your TV can even be turned off and recording will take place.

## General Guidelines About Recordings

As previously mentioned, your TV can even be turned off and a scheduled recording will still take place. You have three streams available to your set top box.

You can record two programs and watch a different program simultaneously.

If three programs are being recorded at the same time, you can only watch one of the recording programs or a program off your DVR list.

## Pausing Live TV (PLT)

Recording capability also allows you to pause live TV (PLT). While watching a channel, PLT will temporarily store what you have watched so you can pause a program and then press play to resume watching. You can also rewind to when



you began watching that channel.



The PLT bar appears whenever you pause, rewind or fast forward live TV.

The center area indicates the amount of TV saved. The “I-bar” shows where you are within that range.

The far left box indicates the current playback function.

The far right box indicates the current time.

### Controlling Recorded or Live TV

While watching a recorded program or live TV, you can use the **Playback Control Buttons** to pause, rewind, fast forward or stop playback.

|| Press **PAUSE** to halt playback at the current point.

◀▶ Press **REWIND** or **FAST FORWARD** to reverse or advance playback from the current point.

▶ Press **PLAY** to resume watching at normal speed.

■ Press **STOP** to exit playback of the program.

### DVR Playback Controller



Any time you press one of the **Playback Control Buttons** while watching a previously recorded program, the DVR playback controller is displayed.

The box to the left indicates the playback function in use.

The bar in the middle gives a visual



# 8 DVR

representation of where you are in the recording. The lighter section indicates how much of the recording has been played.

## The DVR Menu

The DVR item on the Menubar provides access to previously recorded programs, upcoming recordings, prioritize series recordings, schedule an event, and view your recording history.

## Go To DVR

Press **MENU**, highlight **DVR** and press **OK**.

## The DVR Menu Quick Reference

Record History

**Recorded Programs** lists programs you have already recorded. Go here to watch, lock or delete these recorded programs.

Record History

**To Record** lists all Recording events you have scheduled, and allows you to cancel any future recording events.

Record History

**Schedule Priority** allows you to give priority for one series recording over another in the event of a scheduling conflict.

Record History

**Schedule Event** allows you to create a Recording, Reminder or Autotune event for individual or recurring programs.

Record History

**Record History** is a log of when recordings start, complete or are cancelled.

## Go To Recordings



Highlight **Recorded Programs** and press **OK**.


A list of your recorded programs appears to the right.

Recordings you have not yet watched are listed with white text; those you have are listed with grey text. If a program is still being



recorded a red dot icon will appear to the left of the program's name. In the lower right of the info area a percentage full item is shown. This indicates the percentage of total recording space used.

### Whole-Home Icon

Note: The Whole-Home icon  means that the recorded program can be viewed from any set top box in the house and will appear to the left of the program's name as seen in the previous graphic.

### Sorting Recordings

Highlight **Recorded Programs** and press **OK** to bring up your recording list. The first listing will be highlighted. You can sort your recordings alphabetically by title, by the date recorded, by channel that originally aired the program, or by whether you have or have not viewed the recording.



To sort your recordings by any of those categories, press the **Left Arrow Key** to shift the highlight to the left. Highlight the category you want to use to sort and press **OK**. For example, if you highlight **Date** and press **OK**, your recordings will be sorted by the date

recorded with oldest at the top and newest at the bottom.

You can reverse the sort order for any category by pressing **OK** again on that category. Using the above example, pressing **OK** again on **Date** would put your newest recordings at the top and oldest at the bottom.

### Watching a Recorded Program

#### Step 1: Pick a Recording

Highlight the recording you want to watch and press **OK**.



#### Step 2: Play the Recording

Highlight **Play Recording** and press **OK**.



## 8 DVR

### Step 3: Watch the Recording

You will exit to your recording as it begins playing. The Infobar will appear for a few seconds with a green icon to the right to indicate you are playing a recording.

While watching your recording, you can use any of the **Playback Control Buttons** on your remote just as you would if watching a videotape or DVD.

### Step 4: Return To Live TV

When the recording ends, you will be returned to live TV.

If you want to return to live TV before your recording has ended, press **STOP (■)**. See **Playback Controls** on your remote.

---

### Locking or Unlocking a Recording

Locking a recording prevents the system from deleting a program to make space for new recordings.

*Note: You can still manually delete a locked recording. Locking only prevents the system from automatically deleting it.*

#### Step 1: Pick a Recording

Highlight the recording you want to lock and press **OK**.



#### Step 2a: Lock the Recording

Highlight  and press **OK**.

Once a program is locked, a  appears on the recording's listing.

#### Step 2b: Unlock the Recording

If you select a locked program in Step 1, the Lock option will instead be Unlock.

Highlight **Unlock** and press **OK**.

When the program is unlocked, the padlock icon is removed.

---

### Deleting a Recording

#### Step 1: Pick a Recording

Highlight the recording you want to delete and press **OK**.



### Step 2: Delete the Recording

Highlight **Delete Recording** and press **OK**.

### Step 3: Confirm Delete

Highlight **Yes** and press **OK** to confirm, or **No** if you change your mind.

### Step 4: Recording Deleted

Once you confirm the deletion, the entry for that recording is removed from the list.

**Note: Once a recording has been deleted, there is no way to get it back. Please take care when deleting recordings.**

---

## Stopping a Program Currently Recording

### Step 1: Pick a Recording

Highlight the recording event you want to stop and press **OK**.

### Step 2: Stop the Recording

Highlight **Stop Recording** and press **OK**.

---

## Reviewing Programs To Record

You can easily review and cancel programs to be recorded.

---

### Go To- To Record

Highlight **To Record** and press **OK**.

A list of your scheduled future recordings will appear to the right.

The list of programs to be recorded can be sorted by title, date to be recorded, channel airing the program to be recorded, or recordings to be skipped or not.

For more information on sorting items in this list, see Sort Recordings earlier in this section.

---

## Canceling a Future Scheduled Recording

### Step 1: Pick a Future Scheduled Recording

Highlight the recording event you want to cancel and press **OK**.

### Step 2: Cancel the Recording Event

Highlight **Cancel Recording** and press **OK**.



## 8 DVR

### Step 3: Recording Canceled

Once you have canceled the recording event, the entry for that recording event is removed from the list.

### Schedule Priority

When you create series recordings for different programs it is possible that at some point there will be a conflict where two or more different programs come on at the same time. Schedule Priority allows you to pre-determine what program you want to be recorded compared to another.

### Go To Schedule Priority

Highlight **Schedule Priority** and press **OK**.

### Changing Schedule Priority



Schedule Priority lists all series recordings you have scheduled. The series with the highest priority is listed first. This program will always be recorded in preference to any other series recording.

The series with the lowest priority is listed last. This program will

be skipped in preference to any other series recording.

To adjust the priority for a series, highlight the program you want to change and press **OK**.

You will be presented with the option to **Move Up** or **Move Down** the program in priority. Highlight the option you want and press **OK**. If necessary, repeat this procedure until each series is in the order of priority you want.

### Schedule an Event

You can schedule a Recording, Reminder or Autotune event in exactly the same way as you would when choosing Schedule Event from Guide.

### Go To Schedule Event

Highlight **Schedule Event** and press **OK**.



## Editing a Scheduled Event



Once you choose **Schedule Event** the Schedule Event window appears.

Highlight the setting you want to change by **Arrowing** to the item and press **OK**. Use the **Right and Left Arrow Keys** to change the settings and press **OK** on the

remote to end the edit. When all screens are completed, press **OK** on the screen to enter your information.

## Your Recording History

Record History is a log of all events related to your recordings such as recording started, recording completed or recording cancelled.

## Go To Record History

Scroll down the **DVR** listings and highlight **Record History** and press **OK**.

## Reviewing Record History



Press the **Up and Down Arrow Keys** on the remote to scroll through your record history.

When you **Arrow** to a Recording that is labeled **Record Stop** and push **OK** on your remote, the date and start time of the recording appears above. The same process works for **Record Start**.

**Note:** If your set top box does not support Recording, please contact customer service for an upgrade.



## 9 My Library

### Introducing My Library

---

My Library stores all purchased programming, a list of your scheduled Reminder and Autotune events, messages about your service, and a log of your Caller ID.

### The My Library Menu

---

Video

**Video** provides access to your purchased programming.

Video

**PPV Events** allows you to view a previously purchased concert, sporting or other pay per view event.

Video

**Pay Per Block** allows you to view purchased pay per view programming in blocks of time rather than for an entire program.

Video

**Sports Package** allows you to access all programming for any seasonal sports subscription package you have purchased.

Video

**Reminders** lists all Reminder and Autotune events you have created. From here, you can cancel a Reminder or Autotune.

Video

**Messages** allows you to view any messages about your service. Messages may inform you of promotional offers, upcoming events, service upgrades or billing alerts.

Video

**Caller ID** offers access to a log of all calls you have received through Caller ID. You can review Caller ID entries and delete individual entries.

### Go To My Library

---

Press **MENU** on your remote control, highlight **My Library** and press **OK**.

### Go To Rented Videos

 
---

Highlight **Video** and press **OK**.

A list of your purchased programming appears to the right.




## Watching a Rental Video

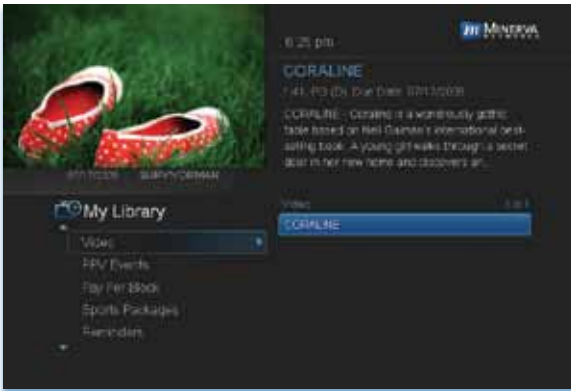

### Step 1: Pick Your Video Rental

 Highlight your Video Rental and press **OK**.

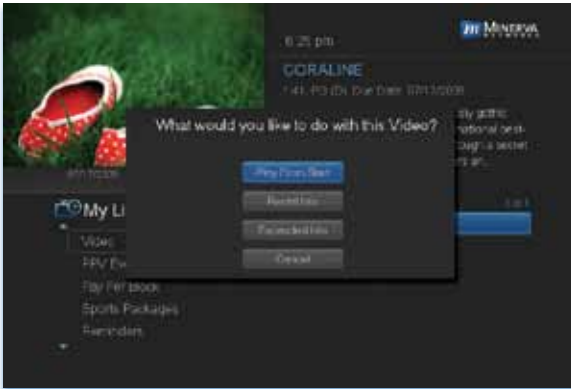

### Step 2: Play Your Rental

Highlight **Play From Start** and press **OK** to start playing at the beginning.

If you have already watched part of the program and want to pick up where you left off, highlight **Play From Last** and press **OK**.

 
## Introducing PPV Events

PPV Events allows you to view a previously purchased concert, sporting or other pay per view event.



# 9 My Library

## Go To PPV Events

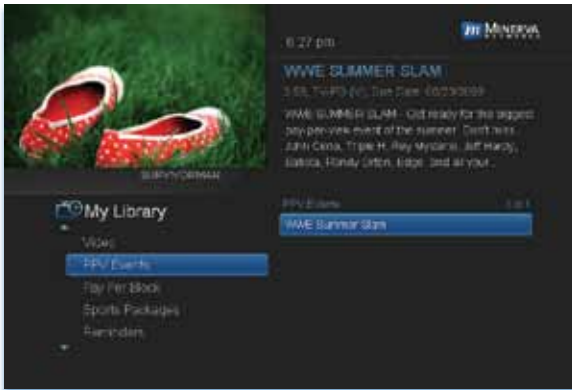


Highlight **PPV Events** and press **OK**. All purchased pay per view events are listed to the right. Highlight the event you want to watch and press **OK** for information and viewing options.

## Introducing Pay Per Block

 Pay per block allows you to view purchased pay per view programming in blocks of time rather than for an entire program.

## Go To Pay Per Block

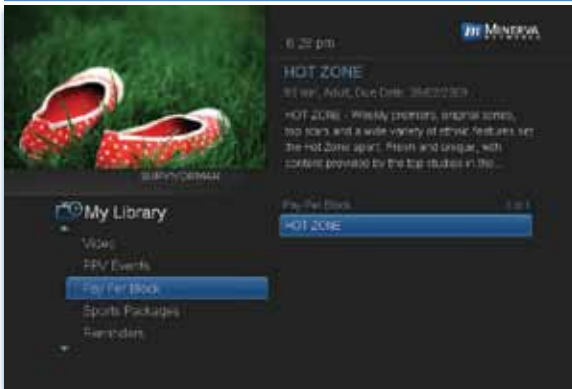


Highlight **Pay Per Block** and press **OK**. All purchased blocks of pay per view are listed to the right. Highlight the block you want to use and press **OK** for information and viewing options.

## Introducing Sports Package

 Sports Package allows you to purchase and watch a season of sporting events such as NCAA college football or professional basketball.



## Go To Sports Package

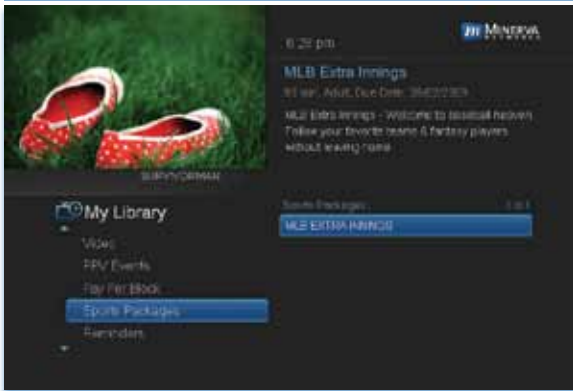

Highlight **Sports Package** and press **OK**. A list of all your current subscriptions are listed to the right. Highlight the subscription you want and press **OK** for information and viewing options.

## Introducing Reminders

 
Reminders lists all Reminder and Autotune events you have created. From here you can cancel a Reminder or Autotune.

## Go To Reminders

Highlight **Reminders** and press **OK**.

A list of your Reminders  and Autotunes  appears to the right.


## Cancel a Reminder or Autotune

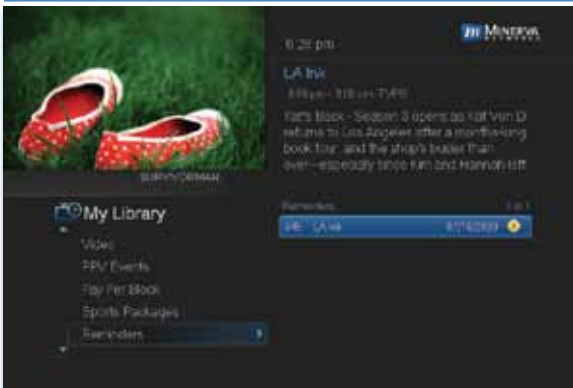

**Step 1: Pick the Program**  
Highlight the Reminder or Autotune you want to cancel and press **OK**.



## 9 My Library

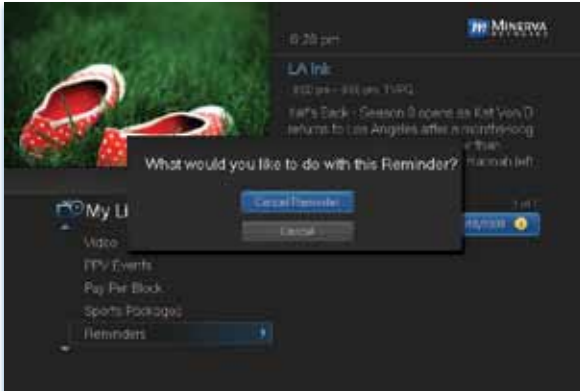 

**Step 2: Cancel the Autotune or Reminder**  
Highlight **Cancel Autotune** or **Cancel Reminder** depending on the type of event you are cancelling and press **OK**.

### Introducing Messages

Messages allows you to view any messages about your service. Messages may inform you of promotional offers, upcoming events, service upgrades or billing alerts.



Whenever you receive a new message an alert will appear on your screen. Press **INFO** on your remote to display the message, or press **EXIT** to ignore the alert and view the message later.

 
### Go To Messages

Highlight **Messages** and press **OK**.

A list of all available messages appears to the right.



## Reading a Message

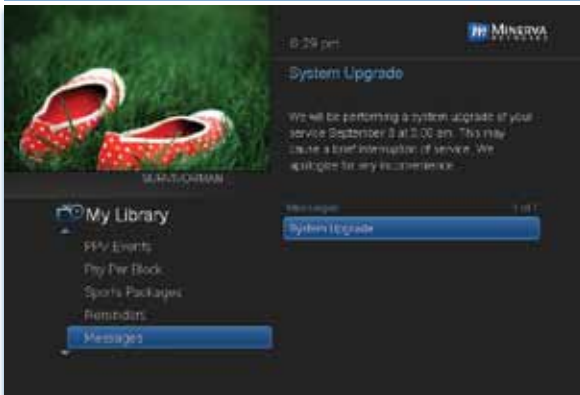

Highlight the message listing you want to read. The full message will be displayed in the Info Area in the upper right-hand corner of your screen.


## Introducing Caller ID

 Caller ID offers access to the Caller ID call log. You can review log entries and delete individual entries.

**Note: You must subscribe to Caller ID to access this feature. Additionally, only certain set top boxes support on-screen Caller ID. Please contact customer service for more information.**

Whenever you receive a call, an alert will appear in the upper corner of your screen. This alert will be removed after a few seconds.

## Go To Caller ID

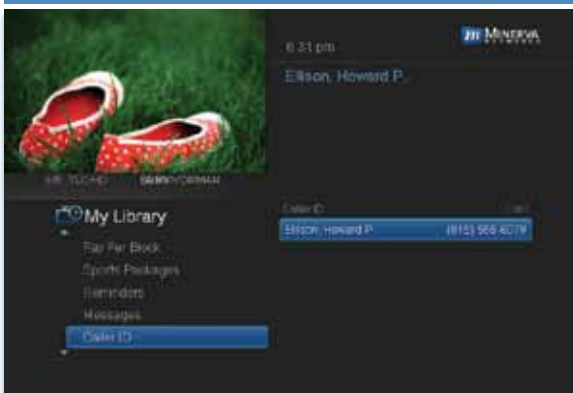

Highlight **Caller ID** and press **OK**.

A list of received calls appears to the right.

Highlighting a Caller ID log entry will display the name and number of the caller, and the date and time of the call.



## 9 My Library

### Deleting a Caller ID Entry

---

#### Step 1: Pick The Entry

Highlight the Caller ID listing you want to delete and press **OK**.

#### Step 2: Delete Caller ID Log Entry

Highlight **Delete** and press **OK** to remove the entry, or **Cancel** if you want to keep it.



## Introducing Controls

**Note: Parental Controls must first be set up in Settings before the Control On/Off icon will appear on the Menubar.**

Controls let you turn on and off all parental controls for your service. When the controls are on, the kids can watch TV without you constantly worrying they may see something inappropriate. With the controls are off, adults can watch their programs without repeatedly entering a password.

When the controls are on, titles of programs that exceed your parental control settings will not be shown. Once the controls are turned off, all program titles will be shown.

## Go To Controls

Press **MENU** and highlight the **Controls** icon.

## Turning Controls On or Off



The Menu lets you know if the controls are on or off.


If parental controls are in effect, the icon will say **Control On**.

If parental controls have been turned off, the icon will say **Control Off**.



# 10 Controls

## Turning Controls Off

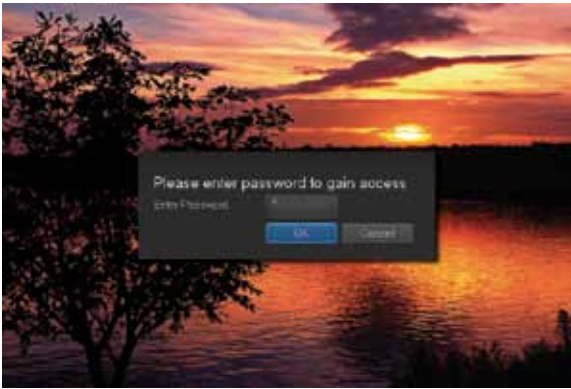

Highlight the **Control On** icon and Press **OK** to bring up the password screen. Use the **Number Pad** on your remote to enter your parental controls password. Then highlight **OK** and press **OK** on your remote.

When you disable the controls, they will remain that way until you turn them back on, or the Parental Control Unlock Timeout is reached. The time out is the maximum period of time for which the parental controls will be disabled.



At the end of the Parental Control Unlock Timeout, the system will automatically restore parental controls. You will see an alert on the screen just before parental controls are restored. This Parental Control Unlock Timeout is located in **Settings**. In **Settings**

click on **Users**, then **Parental Control**, then select the option **Unlock Time Out**, then select the amount of time. This ensures your parental controls will remain in effect in case you watch an adult program and forget to turn the controls back on.

## Turning Controls On

Press **MENU** and highlight **Control Off**, then press **OK**. The icon will change to **Control On**, and the parental controls are now in effect.

For more information on creating parental controls and parental control settings, see section **11 Settings**.

# 11 Settings




## Introducing Settings

Settings gives you control over your video service. You can choose to share purchased programs, change how alerts appear on your screen, create parental controls and block channels. You can also create accounts for members of your family.

## Go To Settings

Press **MENU** and highlight **Settings**. Then enter your password, highlight **OK** and press **OK**. There are two main sections of Settings: Preferences and Users.

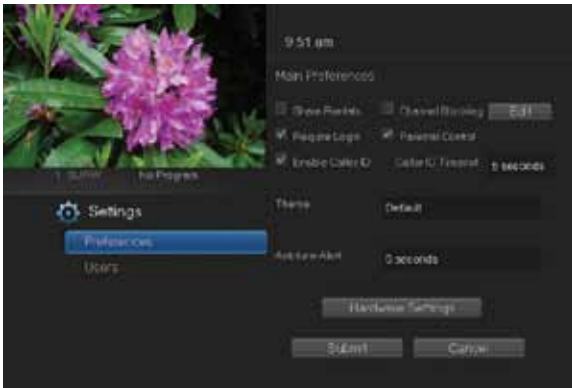

**Preferences** - settings that affect your overall service. This includes if purchased programs are shared between users, if users must log in, how on-screen alerts are handled, parental controls and blocked channels that apply to everyone, and what Theme is used.

## Working With Preferences

**NOTE: Share Rentals and Require Login are only needed if you intend to use User Accounts (i.e. an account for children).**

### Share Rentals

Share Rentals makes purchased programs available for any user (enabled), or only available to the user who makes the purchase (disabled).

Share Rentals

To turn Share Rentals on or off, highlight the check box and press **OK**.

### Require Login

Require Login determines if a user name and password must be entered before being able to use your TV service.

Require Login


To turn Require Login on or off, highlight the check box and press **OK**.

### Enable Caller ID

Enable Caller ID turns on or off screen alerts for incoming Caller ID.



# 11 Settings

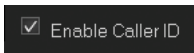

To turn Enable Caller ID on or off, highlight the check box and press **OK**.

## Channel Blocking

Channel Blocking enables or disables the list of channels you have blocked. Blocked channels do not appear in Guide.




To turn Channel Blocking on or off, highlight the check box and press **OK**.

To edit the list of channels that are blocked, highlight the **Edit** button and press **OK**.

*Note: For details on editing channels to be blocked, see “Channel Blocking Edit” later in this section.*

## Parental Control

Parental Control turns all parental control settings on or off for all users.

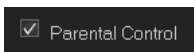

To turn Parental Control on or off, highlight the check box and press **OK**.

*Note: For details on editing parental controls, see “User Settings” later in this section.*

## Caller ID Timeout

Caller ID Timeout determines how long Caller ID notifications remain on the screen.



To set Caller ID Timeout, highlight the option box to the right of **Caller ID Timeout** and press **OK**.

Then press the **Right or Left Arrow Key** to rotate to the amount of time you want the alert displayed, then press **OK**.

## Theme



For service provider only.

## Autotune Alert

Autotune Alert determines how early an Autotune will be shown once you set an Autotune.



To set Autotune Alert, highlight the option box to the right of **Autotune Alert** and press

**OK**. Then press the **Right or Left Arrow Key** to display **0 seconds, 30 seconds, 2 minutes** or **5 minutes**, then press **OK**.

0 seconds will display your Autotune at the exact time the program begins.



Any of the other settings will trigger the Autotune that many seconds or minutes before the program begins.

## Hardware Settings

Hardware Settings

For service provider only.

## Channel Blocking

 
**Channel Blocking Edit** displays a list of all channels available. You can then block or unblock any channel. Blocked channels WILL NOT APPEAR in channel lineup.

Channel Blocking

Edit

To block channels, highlight the **Channel Blocking Edit** button and press **OK**

If no changes have been made on the **Preferences** screen, you will go directly to the list of all available channels. If any changes *have* been made to the main **Preferences** screen and you have not already updated them, a **Save Changes** box will appear. Highlight **YES** and press **OK** if you wish to save these changes. The **Settings Successfully Updated** notice will then appear. Highlight **OK**, and press the **OK** button

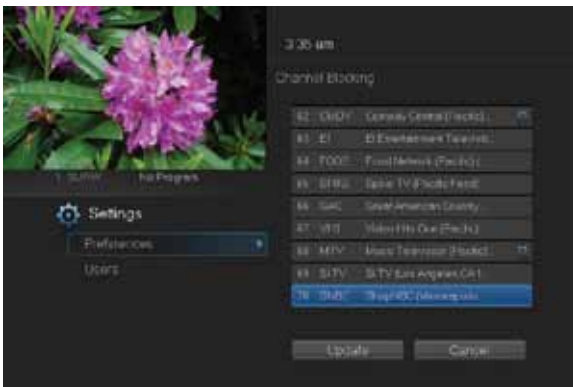

The **Channel Blocking** list will appear.


To block/unblock a channel, highlight the channel entry and press **OK**.

To go to the next screen of channels, press the **Up or Down Arrow Key**. When complete, **Arrow** to update and press **OK**.



# 11 Settings
 
## Working With Settings/Users

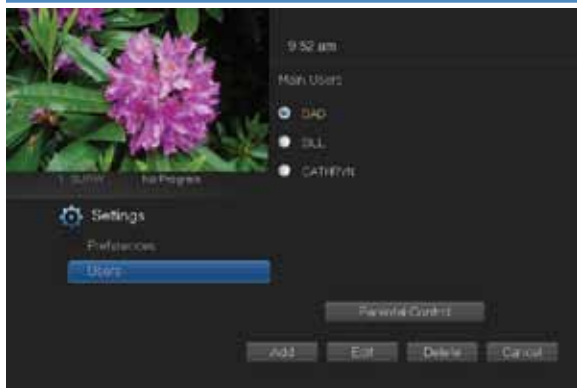

User accounts allows you to have separate parental controls, purchase limits and themes for different family members.


Users Settings allows you to add a user account, edit an existing user account, change parental controls for a user account, or delete a user account.

**Note:** The master account is the first account listed and is shown in yellow rather than white. You cannot delete the master account and cannot change the login name for the master account.

## Go To Parental Controls

 To change the parental controls for an account, highlight that account and press **OK**. Then highlight **Parental Controls** and press **OK**.

## Parental Controls

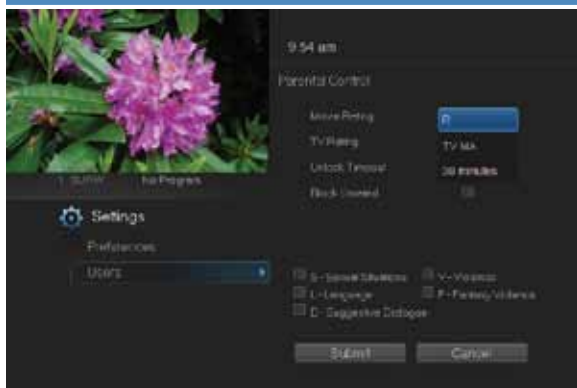

Parental Controls allows you to set ratings restrictions for each user.

## Movie Rating

Movie Rating determines the highest rating for movies that will not be blocked.

# 11 Settings



To set Movie Rating, highlight the option box next to **Movie Rating** and press **OK**.

Use the **Arrow Keys** to cycle through available ratings, then press **OK**.

**Note: For more information on movie ratings, see “Movie Ratings” in the back of this book.**

## TV Rating

TV Rating determines the highest rating for television that will not be blocked.



To set TV Rating, highlight the option box next to **TV Rating** and press **OK**. Use the

**Arrow Keys** to cycle through available ratings, then press **OK**.

**Note: For more information on TV ratings, see “TV Ratings” in the back of this book.**

## Unlock Timeout (Only Available on Master Account)

Unlock Timeout determines how long parental controls will remain disabled when turned off from the Main Menu.



To set Unlock Timeout, highlight the option box next to **Unlock Timeout** and


press **OK**. Use the **Arrow Keys** to display from **30 min** to **270 min** in 30 minute increments, then press **OK**.



## Block Unrated (Only Available on Master Account)

Block Unrated allows or blocks any program that does not have a rating.

To turn Block Unrated on or off, highlight the check box and press **OK**.

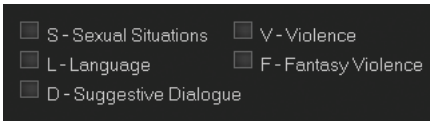

## Content Rating

Content Rating determines the type of content that will be blocked:

S - Sexual Situations

V - Violence

L - Language

F - Fantasy Violence.

D - Suggestive Dialogue

To block a particular type of content, highlight the check box to the left of that item and press **OK**.

## Save or Discard Parental Control Preferences

Once you have changed any Parental Control Settings, highlight **Submit** and press **OK**.




# 11 Settings

To discard your changes, highlight **Cancel** and press **OK**.


## Adding a User Account



To create a new user account, highlight the **Add** button and press **OK**.

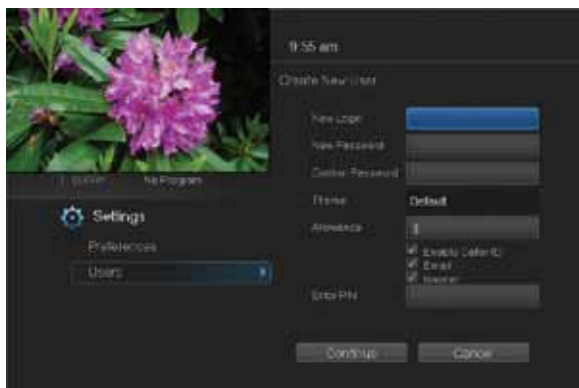

 
Highlight **New Login** to enter the name for the new account and press **OK**. An on-screen keyboard appears.

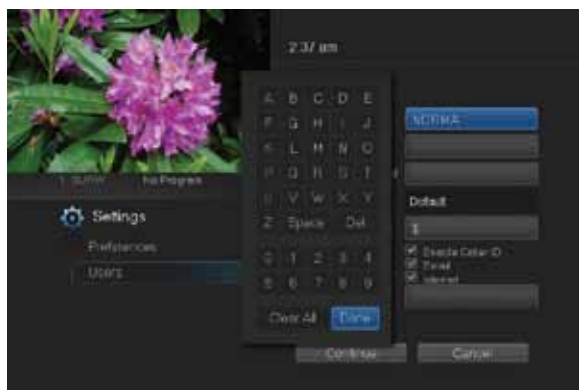

Use the **Arrow Keys** to highlight a letter or number and press **OK** to add it to the login name.

Once you have entered the desired name, highlight **Done** and press **OK** to return to the Create New User screen.

# 11 Settings

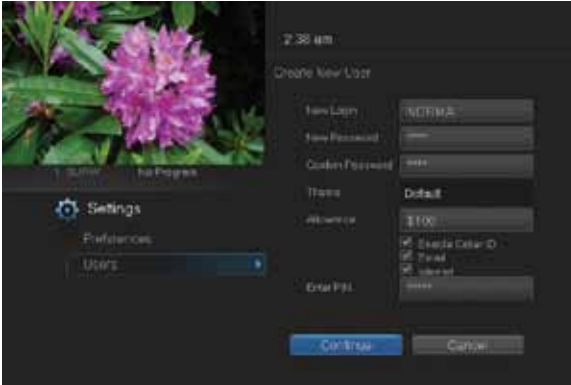 

Highlight **New Password** to enter the password for the new account. Use the **Number Pad** on your remote to enter the password.

CATHRYN

Highlight **Confirm Password** to re-enter the password for the new account. Use the **Number Pad** on your remote to re-enter the password exactly.

Theme Default

For service provider only.

Allowance \$100

Highlight **Allowance \$** to enter a limit to the amount of programs that can be purchased per month for the new account. Use the **Number Pad** on your remote to enter a whole dollar amount (e.g. 200 to limit the account to \$200.00).

Enable Caller ID

Highlight the **Enable Caller ID** check box and press **OK** to enable or disable Caller ID alerts to appear on the screen for this user account.


Enter PIN \*\*\*\*\*

Highlight **Enter PIN** to enter the master account's PIN as a further way of verifying the master account holder is creating this account. Use the **Number Pad** on your remote to enter the PIN.

Now highlight **Continue** and press **OK** to go to the next Add User Account screen.



# 11 Settings

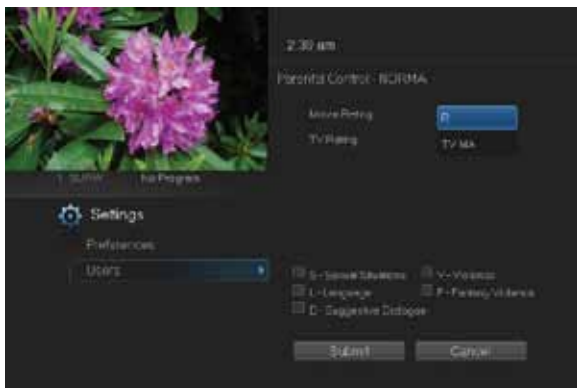

The second Add User Account screen allows you to create parental controls specific to this user.

These parental control settings are identical to the settings shown earlier with the exception that there is no Unlock Timeout or Block Unrated setting.

Once you have entered the settings for the new account, highlight **Submit** and press **OK**.


## Sign Out / Sign In

This function is typically only used if there are more than one user accounts, usually when a parent adds a child as a new user. The parent's account (master account) controls the child's account (sub account).

## Log In

First, you check the **Require Log In** box on the master account **Settings/Preferences** screen. This ensures that the additional users or sub accounts must log in to watch programs. When a new user signs in, parental controls and other set restrictions for that account will be imposed.

## Go To Sign Out / Sign In

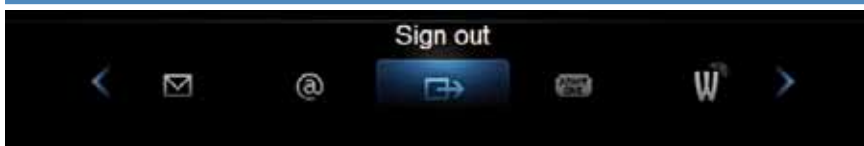

Press the **MENU** button on the remote. Scroll the menubar to the **Sign Out** icon and click **OK**.


# 11 Settings



You will then be signed out of your account, and the **Sign In** screen will appear. Highlight the **Name** entry box and press **OK**. Use the **Up/Down Arrows Keys** to select the name for the desired account. Then highlight the **Password** entry box and enter the password used for


the desired account, highlight **Sign In** and press **OK**.

## Editing a User Account

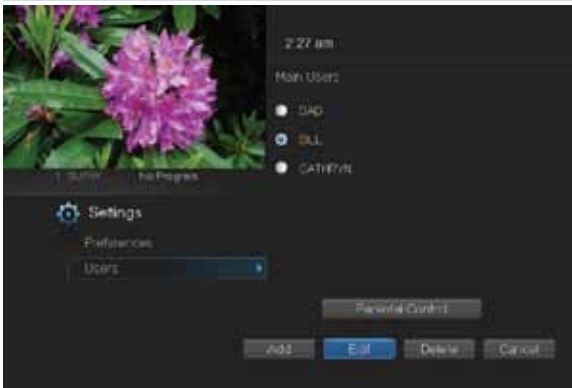


To edit a user account, highlight the user account and press **OK**, then highlight the **Edit** button and press **OK**.


*Note: The master account is the first account listed and is shown in yellow rather than white.*

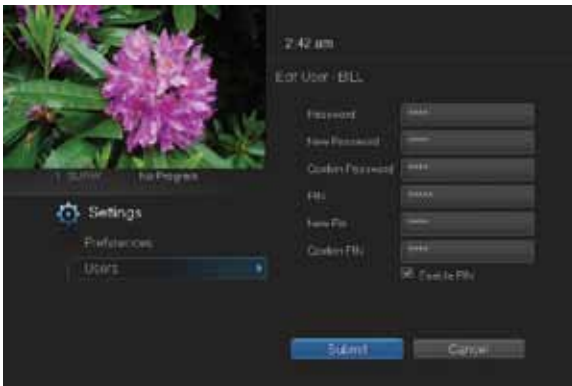

Using the **Number Pad** on your remote, enter the current password for this account.

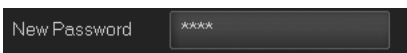

Now highlight **New Password** to change the password. Use the **Number Pad** on your remote to enter a numeric password.

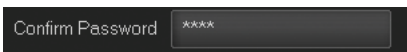

Highlight **Confirm Password** to re-enter the password. Use the **Number Pad**



# 11 Settings

on your remote to exactly re-enter the password.

PIN

Highlight **PIN** and enter the account's existing PIN.

New Pin

Highlight **New PIN** and enter a new PIN for this account.

Confirm PIN

Highlight **Confirm PIN** to re-enter the new PIN.

Enable PIN

Highlight the **Enable PIN** check box and press **OK** to enable or disable the need to use a PIN.

Once you have made all changes to this account, highlight **Submit** and press **OK**.



## Introducing Favorites

Favorites allows you to create, edit, choose or delete a list of your favorite channels. You can even have multiple favorites lists.

## Go To Favorites

Press **MENU** and highlight **Favorites**, then press **OK**.

You will be presented with a screen with options to choose, edit, create or delete a favorites list, or cancel.

 
## Choosing a Favorites List

There are two ways to choose a favorites list:


### Favorites From the Menubar

Follow the steps above in “Go To Favorites,” then highlight **Choose** and press **OK**. Then highlight the favorites list you want and press **OK**.

### Favorites From Guide

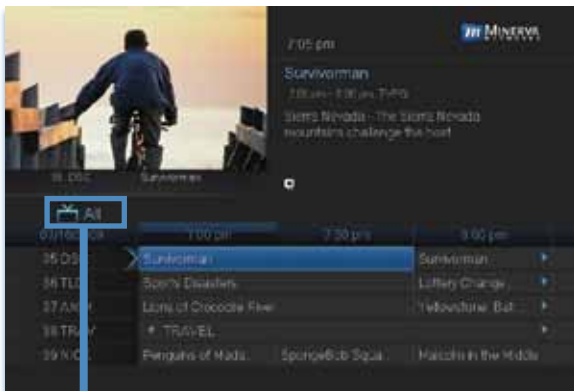

 While in Guide, you can cycle through your Favorites lists by pressing **GUIDE** repeatedly. Each press will activate the next Favorites list. Cycling to **All** will display all available programming.

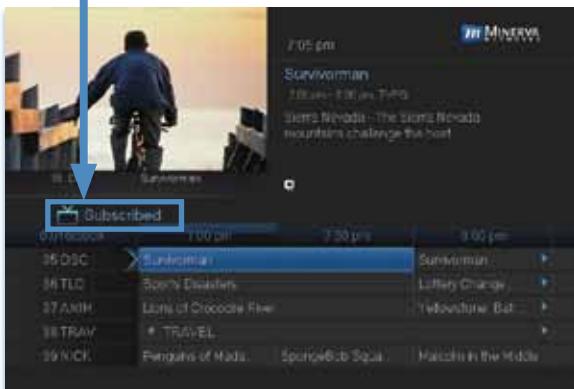

The name of the active Favorites list is shown below the picture-in-picture area. This causes Guide to only display the channels included on that Favorites list.

Pressing **GUIDE** once you have cycled through all Favorites lists will exit Guide.



# 12 Favorites

## Creating or Editing a Favorites List

### Step 1: Create or Edit

Follow the steps above in “Go To Favorites,” highlight **Create** or **Edit**, and press **OK**.

### Step 2: Name Your Favorites List




You will see the Favorites create/edit screen. This screen displays every channel offered.

The **Name:** box is already highlighted. Press **OK** to use the on-screen keyboard to change the name for your favorites list.

First, highlight **Clear All** and press **OK** to clear the default name. Highlight each letter in the new name and press **OK**. Once you have entered the name, highlight **Done** and press **OK**.

### Step 3: Choose Your Favorite Channels

Highlight a channel to add to or remove from your favorites list and press **OK**. A channel included in the favorites list shows a heart icon  to the right of the channel info.

To go to the next screen of channels, press the **Down Arrow Key**.

To save your favorites list, highlight **Update** at the bottom right of your screen and press **OK**.

To cancel your favorite list without saving it, highlight the **Cancel** button at the bottom right of your screen and press **OK**.


## Delete a Favorites List

### Step 1: Select Delete

Follow the steps in “Go To Favorites,” then highlight **Delete** and press **OK**.

### Step 2: Select the Favorites List to Delete

Highlight the favorites list you want to delete and press **OK**.

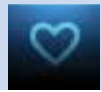

---

## Adding/Removing a Channel To Favorites While Watching TV

---

### Step 1: Pick a Channel

Tune to the channel you want to add or remove from a favorites list and press **OK**.

### Step 2: Pick an Action

Highlight **Add** (if this channel is not on any favorite list), **Remove** (if this channel is on every favorite list), or **Add/Remove** (if this channel is on some favorite lists and not on others) and press **OK**.

### Step 3: Pick a Favorites List

Highlight the favorites list to which you want to add or remove the current channel and press **OK**.

Note: You will not be shown any favorite list which already includes this channel if adding, or which does not include this channel if removing.

---

## Adding/Removing a Channel To Favorites from Other Screens

---

You can use this same process to add or remove a channel to a favorites list from Guide or Search.



# 13 Search

## Introducing Search

 
Search allows you to enter the name or partial name of a program or video you are looking for and have your service find any program matching the text you enter.

## Go To Search


Press **MENU** and highlight **Search**, then press **OK**.

## Search For A Program

### Step 1: Enter The Program Title

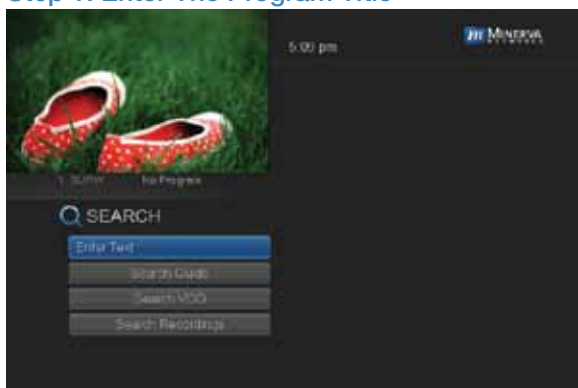

The highlight will be on the **Search** text box when the Search screen appears.

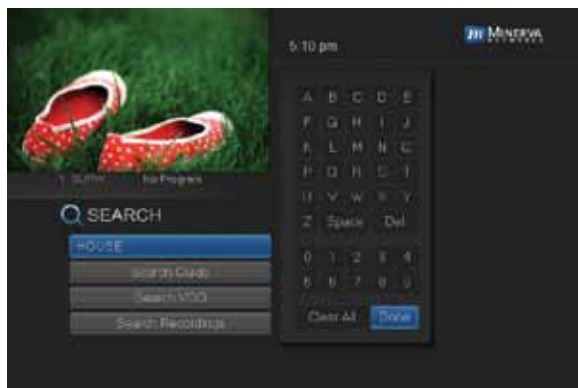

Press **OK** and a keyboard will appear to the right of the screen.

Highlight each letter in the name of the program you want to find, and press **OK** on each. Each time you press **OK** you will see that letter added to the text box.

If you enter a wrong letter, highlight **Del** and press **OK** to go back one space.

If you need to start over, highlight **Clear All** and press **OK**.

Once you have entered as much of the program name as you feel necessary, highlight **Done** and press **OK**.




**Note:** It is best to enter as little as possible when searching. Usually the first 3 or 4 letters in the name will be enough to find what you want.

## Step 2: Search



 Highlight **Search Guide** and press **OK** to have the system start searching for all programs that match your search criteria.

## Step 3: Pick A Result

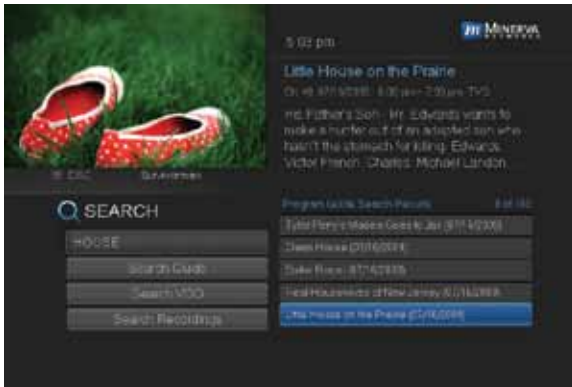

You can now highlight any program or rental listing and press **OK** to...

Watch or record a program if it's on now.

Set a reminder, auto tune or recording for a program if it comes on later.

Add or remove the channel airing it to a favorites list.

You cannot set a reminder, auto tune or recording for purchased programs.

# Set Top Box


## Entone Amulet Set Top Box



1. **REMOTE CONTROL** Connects the set top box to a wall jack using coax cable to provide video service.
2. **SATA** Connects the set top box to an external DVR storage device.
3. **CH3 / CH4** Determines the channel the set top box uses to output video service to the TV over the RF TV connection - adjust if a local over-the-air channel is interfering with reception.
4. **COAX** Connects the set top box to your TV using a standard coax cable - provides audio and video.
5. **VIDEO** Connects the set top box to provide good quality video - provides video only.
6. **AUDIO LEFT/RIGHT** Connects the set top box to provide stereo audio - provides audio only.
7. **VIDEO PB/PR/Y** Connects the set top box to your TV to provide very high-quality video - provides video only.
8. **OPTICAL AUDIO (S/PDIF)** Connects the set top box to a home theater system via fiber optic cable for best quality audio - provides audio only.
9. **S-Video** Connects the set top box to your TV to provide high-quality video - provides video only.
10. **HDMI** Connects the set top box to your HDTV using an HDMI cable - provides best quality audio and video.
11. **ETHERNET** Connects the set top box to the video service using a CAT5 Ethernet cable.
12. **USB 2.0 (Universal Serial Bus)** Connects the set top box to technician's equipment and other USB devices. This is also used to connect a keyboard for advanced applications.
13. **DC INPUT** Provides power to the set top box.

# Set Top Box

## Entone Janus Set Top Box

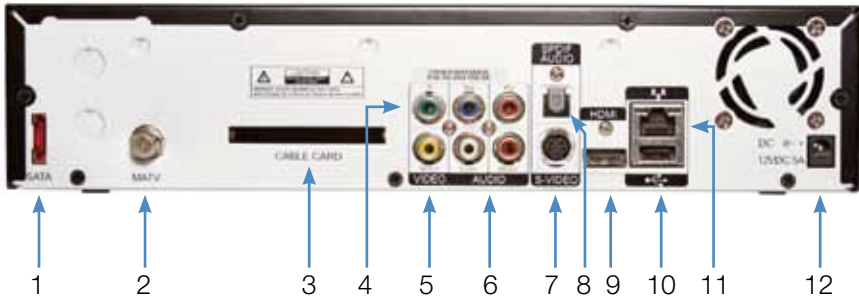

1. **SATA** Connects the set top box to an external DVR storage device.
2. **TV OUT** Connects the set top box to your TV using a standard coax cable - provides audio and video.
3. **CableCARD** Not needed.
4. **COMPONENT VIDEO** Connects the set top box to your TV to provide very high-quality video - provides video only.
5. **VIDEO** Connects the set top box to your TV, DVD Player, or VCR to provide good quality video.
6. **AUDIO** Connects the set top box to your TV, DVD Player, or VCR to provide good quality stereo audio.
7. **S-VIDEO** Connects the set top box to your TV to provide high-quality video - provides video only.
8. **DIGITAL AUDIO** Connects the set top box to a home theater system to provide surround sound audio - provides audio only.
9. **HDMI** (High Definition Media Interface) Connects the set top box to your HDTV using an HDMI cable - provides audio and video.
10. **USB 2.0** (Universal Serial Bus) Connects the set top box to technician's equipment and other USB devices. This is also used to connect a keyboard for advanced applications.
11. **10/100 ETHERNET** Connects the set top box to the video service using a 10/100 Ethernet cable.
12. **POWER IN** Provides power to the set top box.


# Movie Ratings

## MPAA (Motion Picture Association of America) Ratings System




### G – General Audience

This is a film which contains nothing which would, in the view of the MPAA Rating Board, be offensive to parents whose younger children view the film.

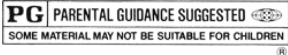

### PG – Parental Guidance Suggested

The theme of a PG-rated film may itself call for parental guidance. There may be some profanity in these films. There may be some violence or brief nudity. But these elements are not deemed so intense as to require that parents be strongly cautioned beyond the suggestion of parental guidance. There is no drug use content in a PG-rated film.

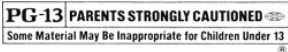

### PG-13 – Parents Strongly Cautioned

A PG-13 film is one which, in the view of the MPAA Rating Board, leaps beyond the boundaries of the PG rating in theme, violence, nudity, sensuality, language, or other contents, but does not quite fit within the restricted R category. Any drug use content will initially require at least a PG-13 rating.



### R – Restricted

An R-rated film may include hard language, or tough violence, or nudity within sensual scenes, or drug abuse or other elements, or a combination of some of the above, so that parents are counseled to take this advisory rating very seriously.



### NC-17 – No Children 17 or Under

NC-17 does not necessarily mean “obscene or pornographic” in the often accepted or legal meaning of those words. The MPAA Review Board does not and cannot mark films with those words. These are legal terms and for courts to decide. The reasons for the application of an NC-17 rating can be violence or sex or aberrational behavior or drug abuse or any other elements which, when present, most parents would consider too strong and therefore off-limits for viewing by their children.

For more information on the MPAA or the MPAA ratings system, please visit [www.mpa.com/movieratings](http://www.mpa.com/movieratings).

# TV Ratings

## TV Parental Guidelines Ratings System

---

The TV Parental Guidelines ratings provides program ratings, and content ratings to provide a clearer idea of the reason for a program's rating

### Program Ratings

---



#### TV-Y – All Children

This program is designed to be appropriate for all children.



#### TV-Y7 – Directed to Older Children

This program is designed for children age 7 and above. It may include mild fantasy violence or comedic violence.



#### TV-G – General Audience

Most parents would find this program suitable for all ages.



#### TV-PG – Parental Guidance Suggested

This program contains material that parents may find unsuitable for younger children.



#### TV-14 – Parents Strongly Cautioned

This program contains some material that many parents would find unsuitable for children under 14 years of age.



#### TV-MA – TV Mature Audience Only

This program is specifically designed to be viewed by adults and therefore may be unsuitable for children under 17.

### Content Ratings

---

Content Ratings are shown just below the program rating.

#### FV: Fantasy Violence (only applied to TV-Y7)

For those programs where fantasy violence may be more intense or more combative than other programs in this category.

The meaning of a content rating increases as the program rating increases.

**V: Violence** TV-PG: Moderate; TV-14: Intense; TV-MA: Graphic

**S: Sexuality** TV-PG: Some; TV-14: Intense; TV-MA: Explicit

**L: Language** TV-PG: Infrequent; TV-14: Strong; TV-MA: Crude


**D: Dialogue** TV-PG: Some; TV-14: Intense; TV-MA: Not used

For more information on TV Parental Guidelines Monitoring Board and its rating system, please visit [www.tvguidelines.org](http://www.tvguidelines.org).







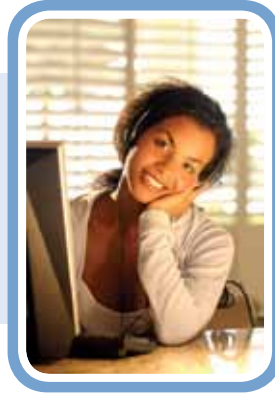

**The North-Eastern Pennsylvania Telephone Company**

720 Main St. • Forest City, PA 18421  
Phone (866) 785-3131 or (570) 785-3131  
[www.nep.net](http://www.nep.net)